

Installation Instructions


JF100e BRACKET

EAW DWG NO 480352 (1)

1. Inventory

Before beginning installation, inventory kit to items listed.

Item	EAW P/N	Qty	Description
1	606009	1	Bracket, HD100WM
2	606070	1	Plate/Top Hat Span
3	102246	2	Screw, 3/8-16 x 1-1/2 SHCS, Black
4	105062	2	Washer, Neoprene, 3/8 I.D. X 1 O.D.
5	105010	2	3/8 Washer, Flat, Black
6	105011	2	3/8 Washer, Lock, Black

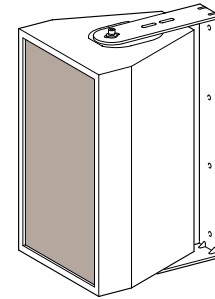

WARNING: Installation should only be done by an experienced technician. Improper installation may cause serious injury. The surface where the bracket/cabinet is to be fastened must have enough structural integrity to support 200 pounds.

2. Mounting the Bracket

Due to various construction methods and materials used today, the hardware for securing the bracket to the mounting surface is not supplied. It is recommended that you consult a building professional for the proper mounting hardware before mounting the bracket.

3. Installing the Plate/Top hat Span

Remove the 2 screws on each side of the top hat. Fit the plate into the recess and secure it to the cabinet with the same 2 screws just removed.

4. Choosing which Slots to Use

There are three slots in each bracket arm. Use the outer slot.

5. Hanging the Cabinet

- Place a neoprene gasket on the bracket's lower arm. Center it on the appropriate hole.
- Position the cabinet between the bracket arms.
- Align the bracket's top forward slot to the cabinet's 3/8-16 threaded hole.
- Hold the cabinet in position and insert the screw with its lock washer and flat washer through the bracket's slot and into the cabinet's top threaded hole and hand tighten.
- Repeat step D through the bottom plate hole.
- Position cabinet and tighten both screws with a 5/16 Allen wrench.

